eureka!®

Invented for the way you clean™

4710 Series

QUICK START GUIDE

Thank you for purchasing your new Eureka vacuum!

Before returning, call Eureka Customer Service

HELPLINE

1-800-282-2886

8 a.m. to 7:30 p.m. (CST), Monday - Friday
10 a.m. to 6:30 p.m. (CST), Saturday - Sunday

www.eureka.com

STEP 1 What's in the carton

Important Safeguards


Dusting Brush

Hose Retainer

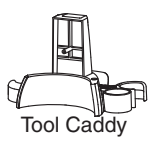
Tool Caddy

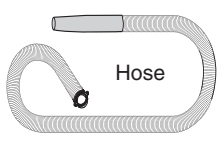

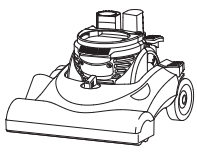
Vacuum Base


Dust Cup and Filter

Handle

Vacuum Back

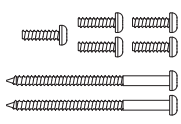
2 Long and 5 Short Screws


Extension Wand and Crevice Tool

SPECIAL FEATURES
Available on some models

Self-Cleaning Duster


Handle with Power Paw®


Duster Chamber


Power Paw®

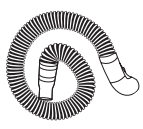
Stair Hose

STEP 2 Easy assembly

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.
Moving parts! Assemble the vacuum cleaner before using.

Use phillips and flat-head screw drivers.

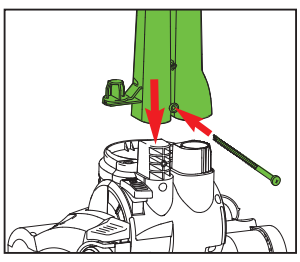
Slide vacuum back onto base. Fasten with one long screw.

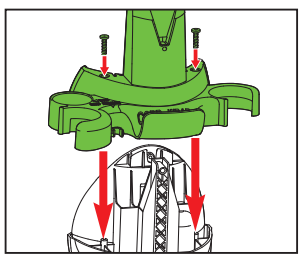
Slide tool caddy onto back. Fasten with two short screws.

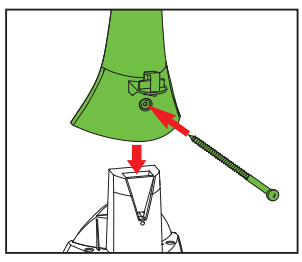
Slide handle onto tool caddy. Fasten with one long screw.

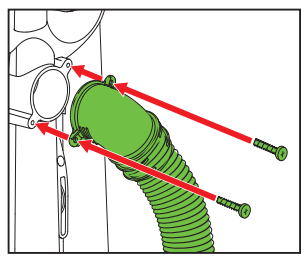
Attach hose to vacuum back. Fasten with two short screws.

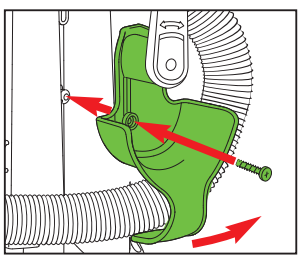
Attach hose retainer with one short screw. Pull retainer out to position hose.

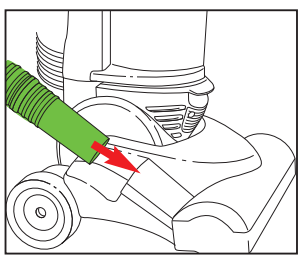
Push end of hose into opening on vacuum base.

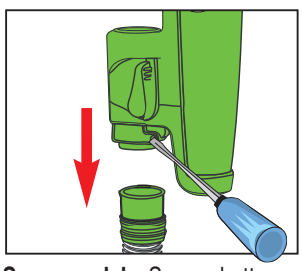
Some models: Secure bottom of duster chamber to hose retainer. Tighten with flat-head screw driver.

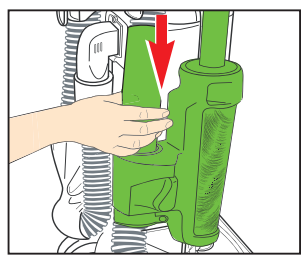
Push end of hose into duster chamber. Place duster in chamber and snap into place.

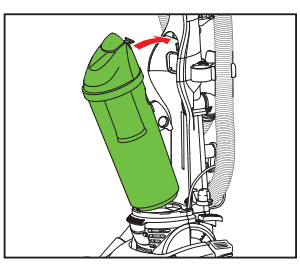
Place dust cup on base and snap into place.

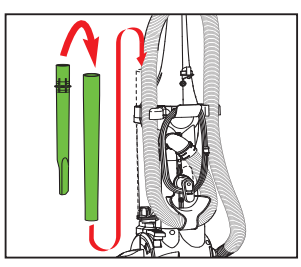
Place wand/crevice tool in holder on side of vacuum.

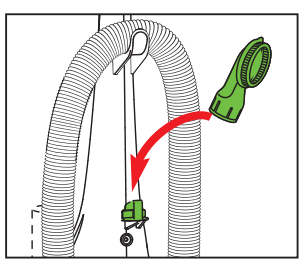
Place dusting brush on back of handle.

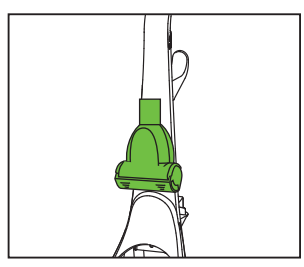
Some models: Snap Power Paw® into clip on front.

STEP 3 Get ready to vacuum

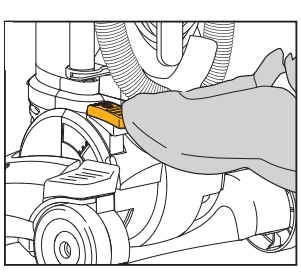
Step on power switch to turn on; step on again to turn off.

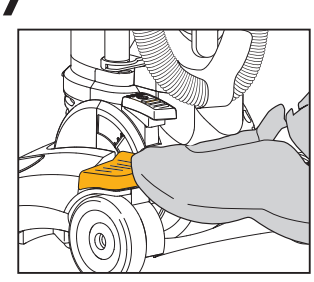
Step on handle release to lower handle into position.

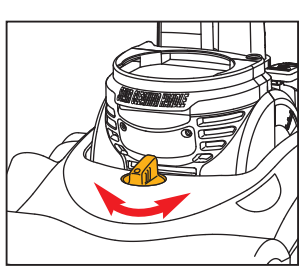
If vacuum is hard to push, raise carpet setting.

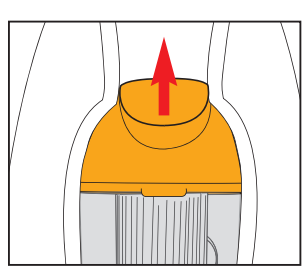
Lift latch to remove dust cup. Empty after each use.

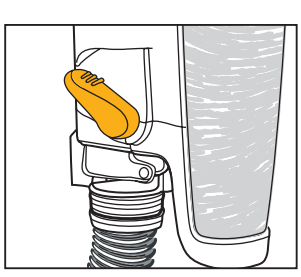
To clean duster, press firmly to snap into place. Turn on and push lever down 10 seconds.

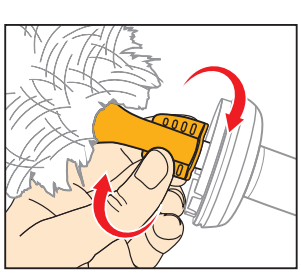
Turn duster to extend. Push firmly to collapse and turn to lock.

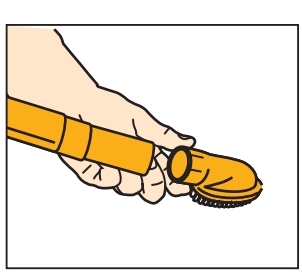
For accessories: Loosen lower end of hose from vacuum and attach tool.

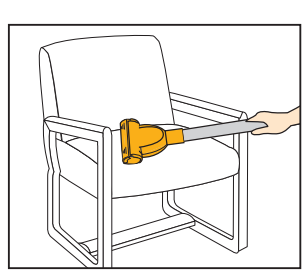
Some models: Use Power Paw® for furniture or stairs.

PROBLEM SOLVING
Refer to Owner's Guide.

MAINTENANCE SCHEDULE
Refer to back of dust cup or Owner's Guide.